



Premier Bench

Product Information & Installation Instructions

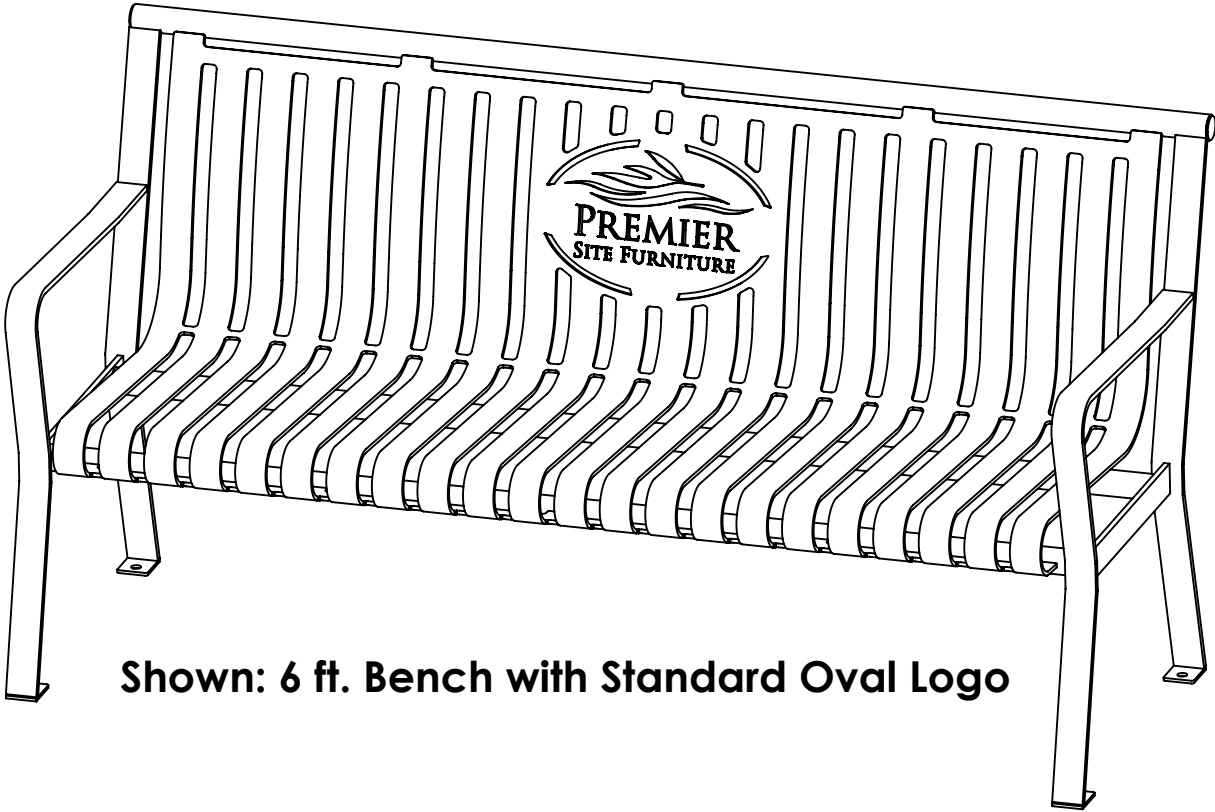

Shown: 6 ft. Bench with Standard Oval Logo

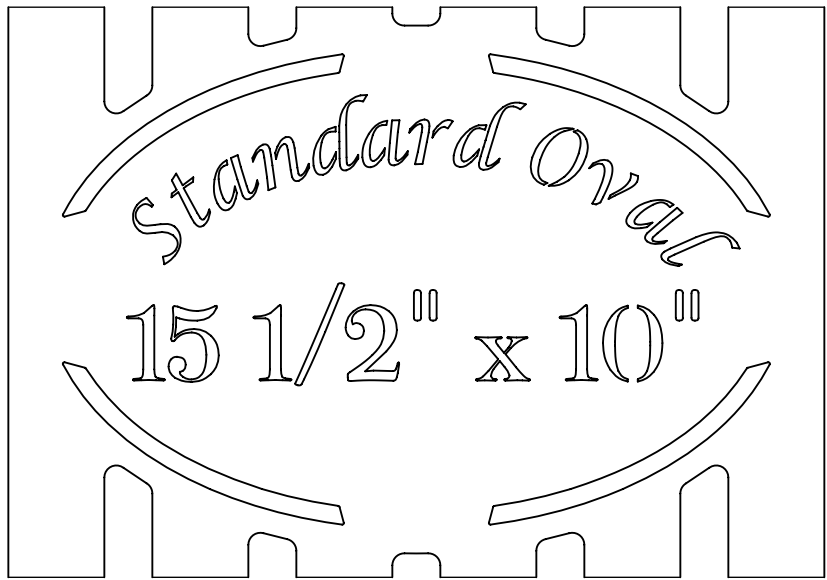

Personalize your bench with a custom message or logo.

The Maple Bench is Premier's most popular design. It's classic look fits well into any landscape, park, or urban setting. This Model comes with an option to be personalized with a simple, laser cut, custom logo of your choosing at no additional cost. A donation plate option is also available.

The ergonomic seat and back are constructed of continuous 1/4" cold rolled steel. The contact feet are made from stainless steel to eliminate risk of corrosion. The bench is fully welded with no overlapping surfaces where moisture can be trapped. The bench is sandblasted to a SSPC-SP 5/NACE standard "white finish", epoxy primed, and powder coated with a "Super Durable TGIC" polyester top coat in the color of your choice.

Standard Colors: Black (BL), Blue (B), Green (G), Red (R), Brown (BR), Classic Grey (CG), Copper Vein (CV), Sierra Tan (ST), Medium Bronze (MB), Statuary Bronze (SB), Redwood (RW) and Yellow (Y).


All Premier Site Furniture products are made in America from no less than 70% recycled steel and are backed by a one year manufacturer warranty.

Model #	Dimensions	Weight
MM400RB	48" x 29" x 40"	170 lbs
MM500RB	60" x 29" x 40"	200 lbs
MM600RB	72" x 29" x 40"	240 lbs
MM800RB	96" x 29" x 40"	290 lbs

Installation Instructions

Four each 5/16" x 4 3/4" long wedge anchors, 5/16" flat washers, and 5/16" hex nuts are required for mounting.

1. Place your bench in the desired location and mark the location of the mounting holes on the concrete.
2. Using a 5/16" diameter carbide drill bit, drill the four holes to any depth exceeding the desired embedment. A minimum depth of 4 1/8" is recommended.
3. Clean drill fines from hole.
4. Assemble washer and nut, leaving nut flush with end of the anchor to protect threads. Drive each anchor into a hole. Once the recommended depth of 4 1/8" is achieved, hand tighten the nut until the washer is flush to surface of the concrete.
5. Expand the anchor by tightening the nut 3-5 turns past the hand tight position, or to the specified torque requirement.
6. Remove the nuts and washers from the anchors.
7. Place the bench over the anchors and reinstall the washers and nuts.

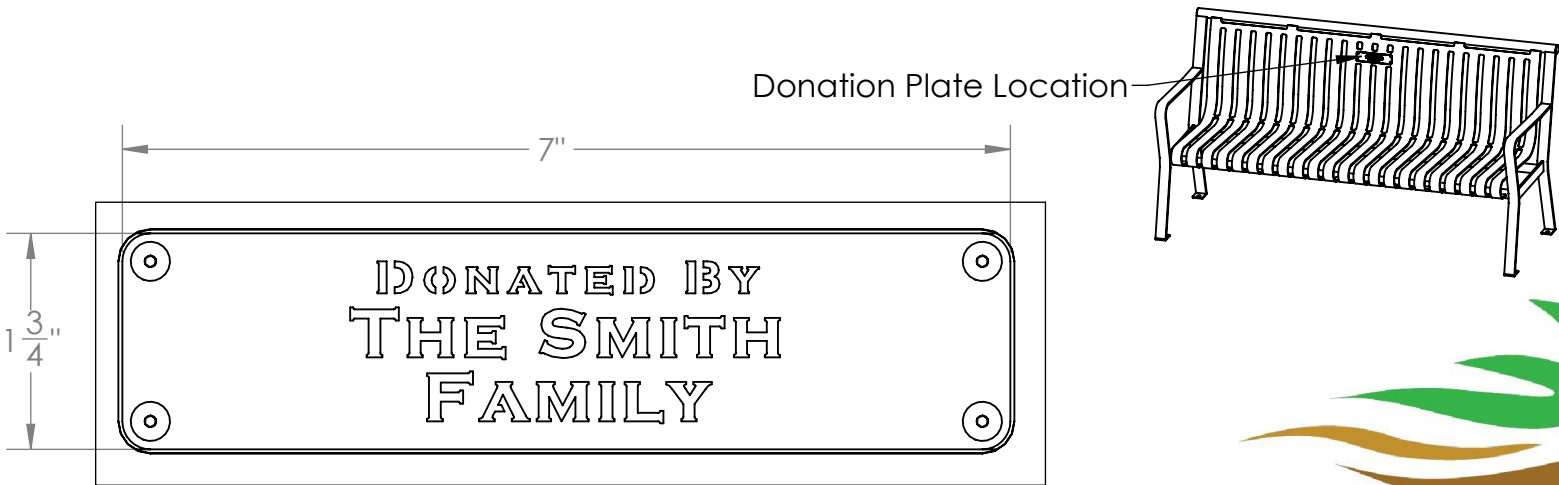

A donation plate is available as an option.

See other custom ordered designs at our website.
www.premiersitefurniture.com

